



**SECTION A-A**

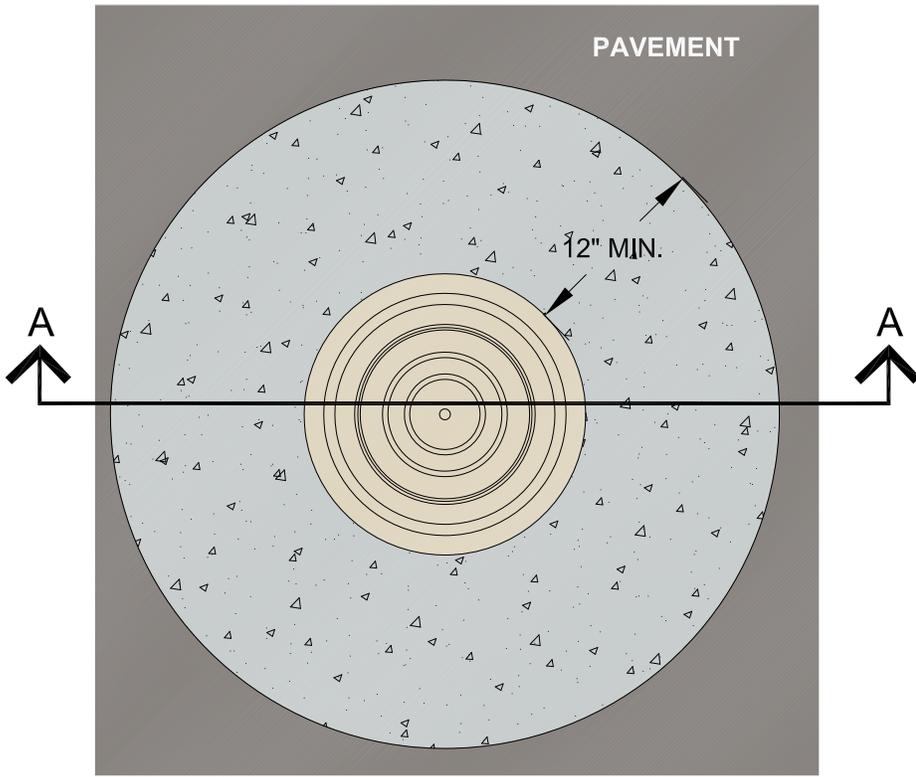

**PLAN VIEW**

**NOTE:**  
 CUT ROUND HOLE IN PAVEMENT.  
 PLACE MANHOLE COVER AND FRAME AT FINISH GRADE.  
 PRESS PVC AND FRAME INTO MH CONE TO SEAT.  
 FRAME AND COVER:  
 INLAND FOUNDRY CO. OR EQUAL  
 FRAME.....NO. 802  
 COVER .....NO. 802-2  
 SLEEVE: USE APPROVED POLYMER SEALANT MATERIAL. PREFERRED 27" PVC, HDPE, OR OTHER AS APPROVED BY ENGINEER.

NO	REVISION	DATE	BY	APPR.
1				

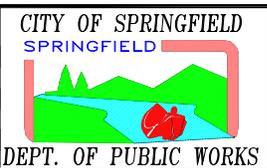

*STANDARD MANHOLE  
 FRAME AND COVER ADJUSTMENT*  
 Ken Vogeney City Engineer 12/18/14 2008

STANDARD DRAWING  
 4-1A